



Cover may vary slightly per model selected



Please read all the instructions before installation.

11/2020

## Transportation cover instructions

---

# Description of issue

## **Purpose / Scope**

These instructions are for the proper installation for the transportation cover. Please look over the text and picture for the proper placement and adjustment for traveling.

## **Warning:**

Bow bimini canvas and boot must be removed with strap applied if traveling.

OPTIONAL BOW CANOPY  
(See warning below)



Cover may vary slightly per model selected

# Installation of cover

## Step 1

Drape the cover over the rails as shown (make sure to take care when draping, there is metal parts that could scratch/dent components)



Cover may vary slightly per model selected

## Step 2

Locate the zipper pack, unzip and loosen the straps in the ratchets, making sure you do not let the straps exit the ratchet. If so, the straps will need to be noodled back thru the cover. ☹️



## Step 3

Align the cover to have the bimini leg access (if optional). Loop and clip as shown on the cleat and bow yes.



Double check the contact pads placement after the hard cinch to assure they did not move, adjust as needed. **(bimini and boot must be removed while going long distances.)**

## Step 4

If the hold down brackets on the sides have not been installed yet now is the time. The straps hanging down mark the locations where the stainless brackets need installed with provided hardware.





# Installation




Locate the zipper pack again, unzip and tighten the straps in the ratchets so it is nice and tight.

## Supplement inspection step.(Canopy trailering support)

If the cover has been ordered from the aftermarket or dealer ordered it after the boat has shipped the factory a modification to the rear bimini feet trailering support may be required. The trailering support will be too tall and cover will look like the below pic with the circle. The Velcro flap will land on a support.

Cutting 3 inches off of the support and reinstalling the foot will make the cover fit as it should.

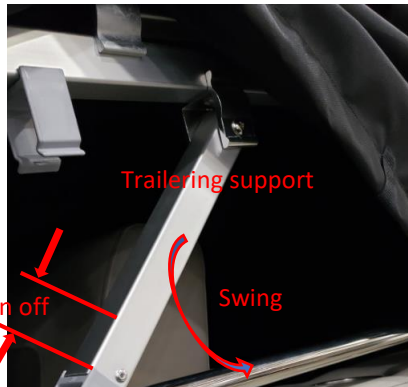

## Step 6

Adjust the straps to a tight fit, trim with scissors leaving a little extra to pull on. The end needs toasted with either a match or a lighter to heal the end to keep from fraying.



# Installation overview



## Step 7

The cover should look like this pic below, nice and snug. Below is the directions for the drain tubes  
(Please remove the front bimini canvas and boot before traveling)




Remove boot and canvas

The 2 pics below are locations that could be used as an exit. The port gate and or the aft gate. These gates have room to maneuver under and hold down at a cleat or resistance as shown. Keep those locations as your standard exits and trim the hose to a length that you know it will not be too short. 6-12in can be out of the boat as shown.



### Port gate

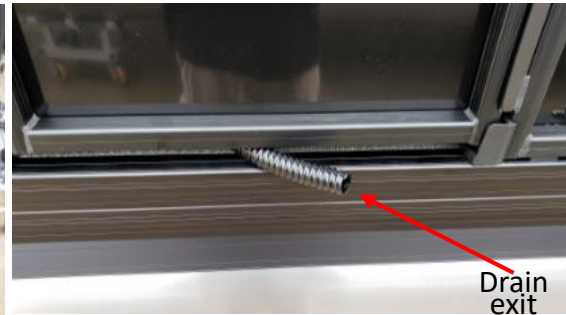

### Bow gate

The drains may need put together at first assembly. Location of the drain hoses exiting the boat is important. They need to be over the side and secured so they do not chaff the area. This is the way the cover removes the water without poles, please place at an exit accordingly.



### Stern gate

